Outside

	Fold (Will not be seen)	Back Side	Fold (Will not be seen)		
Inwards Facing Side (Will not be seen)	Outwards Facing Side	Bottom	Outwards Facing Side		Inwards Facing Side (Will not be seen)
	Fold (Will not be seen)	Fold Underneath Front Flap (Will only be seen when opening the box)	Fold (Will not be seen)		
	Fold (Will not be seen)		Fold (Will not be seen)		
	Fold (Will not be seen)	Front Flap	Fold (Will not be seen)		
		Inside			